

EZ Lantern

Smith-Victor - WARRANTY -

Smith-Victor warrants to the first owner of the EZ Lantern to be free from defects in the material and workmanship for a period of one (1) year from the date of purchase and will repair or replace product found to be defective under normal use. Warranty does not cover damages caused by shipment, by product abuse, accident, modification, disassembly or use beyond intended use specified by Smith-Victor.

This warranty is the only warranty made to any person by Smith-Victor and is in lieu of all other expressed or implied warranties. The remedies set for this warranty shall be the exclusive remedies available to any person for breach of this warranty. Under no circumstances shall Smith-Victor be liable to any person for incidental or consequential damages, whether arising out of breach of warranty or other contract, negligence, strict liability or other tort or otherwise.

Smith-Victor • Photogenic • Dot Line
Quantum • Radiopopper • Photoflex • Cool-Lux
Speedotron • Norman • Logan

Smith-Victor is a division of PromarkBRANDS

1268 Humbracht Circle, Bartlett, IL 60103 U.S.A.

800-348-9862 or 630-830-9200

sales@smithvictor.com | www.smithvictor.com
www.promarkbrands.com



999614 Manual for 401614 EZ Lantern_8-2018



EZ Lantern

User Manual

Easy open, easy close, lantern style
soft box with Bowens style mount

Model: EZ Lantern
Item: 401614



Perfect for stills or videos
Works with LED's and monolights

FEATURES

- Very easy to set up and take down
- One button operation
- Provides omni-directional light
- Natural looking light simulates skylight
- Excellent for still or video use including, architectural interiors, events, portraits and product applications.

Set Up



Be sure lock button is free from lantern fabric. If the fabric covers the button, it will prevent the lantern from locking in the open position.



Brace lantern against the floor for resistance during compression. Use two hands to provide even pressure.



Expand the lantern by pushing down evenly. Look down into the lantern interior from the hole in the top in order to line up the lock pin.



Feed the lock pin into position until it clicks in place. The lock button will pop out as the lantern locks in the open position.

Break Down



To collapse the lantern simply push in the lock button. The lantern will “pop” and collapse like an umbrella.

Product Specifications

- 25” EZ Lantern
- Simple push button open and closing of the lantern
- Bowens style mount

What's in the Box



- (1) EZ Lantern with Bowens style mount
- (1) Carry Bag